LIST OF PRODUCTS

* Digital Multimeter
* Digital AC & AC/DC Clampmeter
* AC Clamp Adaptor
* AC/DC Current Adaptor
* Thermo Anemometer
* Thermo Hygrometer
* Distance Meter
* Digital Lux Meter
* Network Cable Tester
* Power Factor Regulator
* Earth Resistance Tester
* Digital Panel Meters
* DC Power Supplies
* High Voltage Detector
* Calibrators
* Gas Analysers
* Frequency Counter
* Function Generator
* Phasing Sticks
* Battery Tester
* Waterproof Pen Testers
* Solar Power Meter
* EMF Detector
* Wood, Paper & Grain Moisture Meter
* Transistorised Electronic Analog & Digital Insulation Resistance Testers(upto 10 KV)
* Digital Sound Level Meter & Sound Level Calibrator
* Digital contact & Non-contact Type Tachometer
* Digital Non-contact (infrared) Thermometer
* Maximum Demand Controller/Digital Power Meter
* Digital Hand Held Temperature Indicators

KUSAM-MECO®

Email : sales@kusam-meco.co.in
Web.: www.kusamelectrical.com

KUSAM-MECO®

AN ISO 9001:2015 COMPANY

MULTIFUNCTION & INSULATION CONTINUTY - VOLTAGE TESTER

MODEL - KM 1154TMF



OPERATION MANUAL

TABLE OF CONTENTS

Description	Page
Safety Rules.....	02
Safety Checks	03
Don't touch	03
General Description.....	04
Brief Product Description for.....	05
Features.....	07
Pre-testing Safety.....	10
Operating Instructions.....	12
Inside Lid Instructions	15
Very Important Automatic Features.....	17
Principle of how they work and Results.....	18
Preparation for use.....	20
Replacing the batteries.....	21
Fuse Replacement.....	21
Specifications.....	21
Limited Warranty.....	24

WARRANTY

Each “KUSAM-MECO” product is warranted to be free from defects in material and workmanship under normal use & service. The warranty period is one year (12 months) and begins from the date of despatch of goods. In case any defect occurs in functioning of the instrument, under proper use, within the guarantee period, the same will be rectified by us free of charges, provided the to and fro freight charges are borne by you.

This warranty extends only to the original buyer or end-user customer of a “KUSAM-MECO” authorized dealer.

This warranty does not apply for damaged Ic’s, fuses, disposable batteries, carrying case, test leads, or to any product which in “KUSAM-MECO’s” opinion, has been misused, altered, neglected, contaminated or damaged by accident or abnormal conditions of operation or handling.

“KUSAM-MECO” authorized dealer shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of “KUSAM-MECO”.

“KUSAM-MECO’s” warranty obligation is limited, at option, free of charge repair, or replacement of a defective product which is returned to a “KUSAM-MECO” authorized service center within the warranty period.

THIS WARRANTY IS BUYER’S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. “KUSAM-MECO” SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE WHATSOEVER.

All transaction are subject to Mumbai Jurisdiction.

MOV TEST

Test Voltage..... 5-1020Vdc
Voltage Results Accuracy..... ±3%
Voltage Result Resolution..... ±2 Counts
Measure the Threshold Voltage Calculate the approximate Vac Marking on the MOV (depend on manufacturer)
Contact toptronic@telkomsa.net for more details on this function.

GAS ARRESTER TEST

Test Voltage.....5-1020Vdc
Voltage Results Accuracy.....±3%
Voltage Result Resolution.....±2 Counts Measure Voltage. the Threshold
Contact toptronic@telkomsa.net for more details on this function.

PROTECTIONS

Over Load.....600V (between all terminals)
Over Voltage .....Class Ⅲ - 600V towards ground.
Fuses.....1 x 500mA / 250V, 5 x 20mm

MECHANICAL

Size..... 250 x 190 x 110 (mm)
Material..... Polycarbonate /A BS
Weight ..... Approx. 630g (Battery included)
Display..... Liquid Crystal Display

ENVIRONMENTAL

Operating temperature Range: 1 °C to + 55 °C not in full sun!!!!
Storage Temperature: -20 ° C to + 70°C

CLEANING

Clean the instrument case with an anti-static cleaner and wipe with dry cloth.

SAFETY RULES

CAUTION  **RISK OF ELECTRIC SHOCK**

This tester has been designed with your safety in mind. However, no design can completely protect against incorrect use. Electrical circuits can be dangerous and / or lethal when lack of caution or poor safety practices are used.

Do not carry out field measurements on either the power system grounding, during periods of forecast lightning activity, in areas that encompass the station being measured or of the power network connected to the station being measured. In the event that lightning occurs, stop all testing and isolate any temporarily installed test spikes.

Preparations for testing of power system grounding can leave personnel vulnerable to exposure caused by faults at or fed from the system under test, transferred potentials from remote test grounds, and inadvertent line energization. While the probability of the occurrence of one of these events is low, personnel safety will, nevertheless, be enhanced by the following:

When working near high tension systems rubber gloves and shoes should be worn. Work on clean, dry crushed rock or an insulating blanket. Avoid bare hand to hand contact between the tester and extended test leads.

When using the tester with test leads, ensure that they are safe and properly authorized

Disconnect the tester from any external circuit when checking or changing the Fuse and/or batteries.

CAUTION  **READ THE MANUAL**

Follow the instructions in the Manual for every measurement.
Read and understand the general instructions before attempting to use this tester

SAFETY CHECK

Before using the tester check the condition of the test leads and the fuses.

The test leads must be free of cracks or any damages and must be insulated as when they were new.

Fuse replacement is described later in this user's manual..

When changing the fuses by removing the cover to access the internal circuitry, always disconnect the test leads.

When replacing the fuse use only the type specified, HBC fuse, and insert correctly into the fuse holder.

Always double check the lead connections before making any measurements. For increased safety, use fused test leads (optional).

DON'T TOUCH

Don't touch exposed wiring, connections or other "Live" parts of an electrical circuit. If in doubt, check the circuit first for voltage before touching it.

Do not use cracked of broken test leads.

THIS INSTRUMENT SHOULD ONLY BE USED BY A COMPETENT, SUITABLY TRAINED PERSON.

REMEMBER

SAFETY IS NO ACCIDENT



CAUTION RISK OF ELECTRIC SHOCK



CAUTION READ THE MANUAL

INSULATION TEST

Resistance Range

50V Test Voltage	0.1M - 400M Ohms
100V Test Voltage	0.1M - 800M Ohms
125V Test Voltage	0.1M - 1G Ohms
250V Test Voltage	0.2M - 2G Ohms
500V Test Voltage	0.2M - 4G Ohms
1000V Test Voltage	0.2M - 8G Ohms

Accuracy on all ranges.....4GΩ~8GΩ:±5% rdg

0.1MΩ~4GΩ:±3% rdg

When Voltage is constant, Current is

Software Limited at..... ±1.2mA

Short Circuit Current on all ranges

Maximum Short Circuit Current..... ±4mA.

CONTINUITY TEST

Short Circuit Current Test.....	>220mA
Open Circuit Voltage.....	5Vdc
Continuity Range(Ohms).....	0.01-1999
Continuity Accuracy 0.01 to 100 Ohms.....	±1% of Rdg
Continuity Accuracy 100 to 300 Ohms.....	±1.5% of Rdg
Continuity Accuracy 300 to 1999 Ohms.....	±2% of Rdg
Continuity Resolution.....	±2 Counts

AUTO-NULL

Auto-Null Value Saved in no volatile Memory

Auto-Null Threshold..... 5 Ohms

BUZZER

Buzzer Threshold..... 3 Ohms

REPLACE THE BATTERIES

This instrument operate well with Alkaline 1.5V or rechargeable 1.2V batteries. It could be operated with inferior batteries too. It use 8 of them. To replace the batteries, disconnect the test leads, then unscrew the bottom battery cover and replace the batteries.

DISPOSING OF BATTERIES

Only dispose of batteries into a purposely dedicated disposal system. Do not dispose to the wrong place. Look after your environment, please.

FUSES REPLACEMENT

Unscrew the back cover and replace the faulty fuse with the same type, then screw the cover back into place correctly

SPECIFICATIONS

GENERAL

Load Battery Test Current..... About 300mA
Battery Voltage Display Accuracy..... ±0.5V

BATTERIES

Type alkaline.....1.5V
Other Type.....1.2V
Quantity.....8

DISPLAY

Type.....LCD 2 lines x 16 Characters

AUTO-OFF

Automatic Turn OFF Time after last action....5Min.

VOLTMETER (3 minutes maximum)

Automatic Voltage DC Range..... 0 to 950Vdc
Automatic Voltage AC Range.....0 to 700Vac
Resolution on both voltage types.....±1V
Accuracy on both voltage types.....±1.5% of FS

GENERAL DESCRIPTION

A new generation of Modern Digital MultiFunction Testers is born. These Testers have a range of new features not even found in Expensive Advanced Test Equipments.
They are optimized for Telecommunication and Electrical work.

- **They test insulation at voltages settings of: 1000V, 500V, 250V, 125V, 100V and 50V.**

Not only Rugged, but designed to excel in Harsh environment, still, remaining low cost and affordable.

- **They can be operated with rechargeable batteries, alkaline or low cost general purpose batteries.**

This Family of Originally Designed Unique Products have multi-features:

- **Insulation Resistance Testing, Voltage(ac-dc) measurements with Automatic Hold facility, Continuity Test with a short circuit current of Minimum 200mA.**

Two very unique features are found on these Multifunction testers;

- **MOV and Gas Arrester Testing.**


Today, most equipments and electrical installations are protected by MOVs and Gas arresters.
They can test these devices to establish if the devices are still operating correctly or not.
Energy conservation is featured on all these new Advanced Products.
This new generation of test equipments have no moving parts. All calibration are saved internally in a non volatile memory. Calibration can be done at any calibration facility around the world, without the need for dedicated calibration equipment. This makes these products easier to maintain and lower the cost of calibration and ownership. Their calibration interval can be extended without much problem as vibrations does not affect the calibration adjustments.

They comply to all the latest regulations, including UK 16 Th Edition .
This product family is part of our new World Class series. They prominently feature heavy duty protections in their circuitry.

BRIEF PRODUCT DESCRIPTION

The 1154TMF have all the basic features needed to check and certify an electrical or telecommunication installation.

- The buzzer features are always ON.

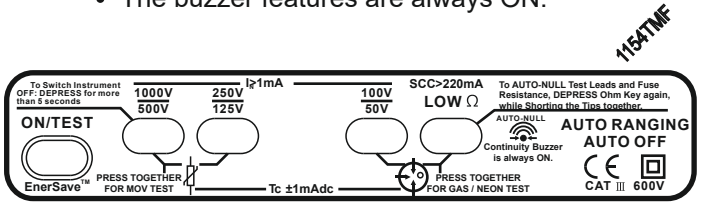

- **The Batteries are tested at startup.**
  These testers complies to all good Standards.
- **The Test Button is utilized to switch the Instrument On as well as to start or stop the test. It is also utilized to accept a selection and to disable the EnerSave™ feature.**
  At any time, the test can be stopped by depressing the Test key again.
- **The Ohm Key is a multi-purpose key, you press it to select the Continuity Test. You press it too, to Auto-mull the test leads and fuse.**
  The Voltmeter is the default mode of this instrument.
- **There is an automatic Voltmeter which is accessed after start up.**
  For Insulation Testing, the user can select the test voltage.
- **Test Voltage of 1000V, 500V, 250V, 125V, 100V or 50Vdc can be selected.**
  The MOV and Gas Arrester Tests are available on both testers.

The Continuity has an auto-nulling facility which is saved into non volatile memories, so you only need to null the leads of fuse again if they are changed.

AUTO-OFF

They have an auto-off feature and the power automatically turn off after 5 minutes of inactivity.

SAFE VOLTMETER DETECTION

On any of the tests, if the user connect the leads to a voltage, prior to starting the test, te tester will detect the voltage and automatically turn the Voltmeter ON as well as an alarm. All other test facilities are disabled when this happen.

DIGITAL CALIBRATION

This family of testers are digitally calibrated. That mean that there have no potentiometers or moving part in this product. All the correction factors are saved into the internal memory.

BATTERIES

The testers can work with 8 x 1.5V batteries. The user can also use rechargeable batteries in the same product.

PREPARATION FOR USE

Fuses:

In doubt, check the fuses using a ohm meter.
Please note that this instrument will not indicate anything, should the fuses be blown.
Please note that this instrument will be unsafe if the fuse is blown as no indication will be shown and nothing will be detected by it. For that reason, you must verify the fuse Before and after any test.

Test Leads:

Check the test leads for defects or cracks. Replace if cracked or damaged. Only replace with the same type. Use the Continuity test to check, with the fuse(s), that the complete circuit is in good condition.

Cleaning:

Use a damp cloth to clean the case. Do not use chemicals

SAFETY VOLTMETER

Once the battery test is terminated, the tester goes automatically into the Voltmeter mode. It has an Automatic voltmeter AC and DC. The safety voltmeter even has a Hold function built-in.
The Hold Function will automatically put the last valid reading on hold if the user disconnect the leads.

This is a safety feature, where the user does not need to observe the display but instead observe where he has his hands and probes. This way, safety is increased. The Safety Voltmeter works up to Vdc 900V (both polarities) with resolution of 1V and 1% accuracy. It also measure up to Vac 700V, with the same resolutions and accuracies.

INSULATION

It has six insulation test Voltages. 50, 10, 125, 250, 500 and 1000V, all of theses are
capable of giving more than 1mA at their nominal voltages.
50V range can measure from 0.1M ohms up to 400M ohms
100V range can measure from 0.1M ohms up to 800M ohms
125V range can measure from 0.1M ohms up to 1G ohms
250V range can measure from 0.2M ohms up to 2G ohms
500V range can measure from 0.2M ohms up to 4G ohms
1000V range can measure from 0.2M ohms up to 8G ohms

CONTINUITY

The continuity test has an open circuit voltage of exactly +5Vdc regulated. The Short Circuit Current of the continuity circuit is about 220mA. The Continuity test can measure from 10 milli-ohm (0.01) up to 2Kohms. The accuracy is better than 1% of reading from 1 ohms to 200 ohms, plus minus one digit.
Below 1 ohms, it's better than 5% of readings plus minus 3digits.
Above 200 ohms, up to 1999 ohms, it's better than 3% of readings plus minus 3 digits.

- **To access the MOV test, You need the depress the 1000V/500V and the 250V/120V keys simultaneously.**

The MOV test results will be shown on the LCD, showing the knee voltage while 1mA is flowing through the device under test.

- **To access the Gas Arrester Test, you need to depress the 100V/50V And the Ohm keys simultaneously.**

The Gas Arrester test results will be shown on the LCD, showing the firing voltage of the device under test.
Before any test is performed, (provided the test leads are connected properly and the fuse is intact) it makes a voltage test to assert that there is no voltage on the device or circuit under test. If there is a voltage which could be a safety problem for the test, the tester, automatically, switch to the Voltmeter and shows the voltage on the display. Be it AC or DC.
If voltage is present on the leads before test is started, the selected test is cancelled and the keypad is disabled, preventing errors of operation. This makes this tester one of the safest to operate to date. Once any voltage is cleared, test can begin. Should you want to measure Insulation resistance, you can select by using the test Voltage which can go into the Giga-Ohm range on the higher voltages settings. Should you want to test continuity, use the Low ohms scale, down to 0.01Ohm and also the buzzer.

- **You can null the fuse and test leads using the Auto-Null feature.**

Of Course on this model, Auto-hold is featured.

- **You will appreciate the superior Safety of Auto-Hold when you decide to visually look after your arms and fingers without needing to check the display.**

Auto-Hold is always turned ON and with it, you can simply touch the voltage and remove the test probes.
The last valid voltage will be on the display when you want to see it. While Dangerous voltages are present on the leads, it beeps too, signaling the user that he is touching dangerous voltage.

FEATURES

ON Key.

When Depressing the ON button, the tester starts up. The tester will automatically make a battery test (under load condition) and display the results.

After that, the voltmeter is automatically selected. If voltage is present, the tester will automatically display it on the display and disable all other features until the voltage is removed from the terminals.

Battery Test

There is no battery Key, but a Controlled Load is switched ON automatically during starting of the tester.

That Load draw some current from the battery. While drawing that current, the battery voltage is measured and displayed. To do an other "nder load" battery test, you will need to re-start the

The battery is monitored constantly while the tester is operating. Should the battery be low, the low battery indicator will lit up on the display.

Voltmeter

There is no Voltmeter Key as this is the default mode of this instrument. The tester switch to the voltmeter mode after start-up. This is an automatic AC/DC voltmeter.

This mode is the default mode of the tester, meaning that it's monitoring the leads before any test is started and also monitoring the leads at Switch ON of the tester.

The voltmeter is also activated during automatic discharge of circuit after an insulation test.

Auto-Hold

Auto-Hold feature is always ON (displays Auto Hold on the LCD), the tester a utomatically hold the last valid reading present on the test leads. This is a very good feature for added safety. That mean that the user can focus on his test leads and what they are touching instead of looking at the display.

Auto-off

This family of instruments has an Auto-off feature which will switch off the tester, should no key or function be in use. Please, again, note that if voltage is present on the leads, the instrument will warn the user of that and the auto-off feature will be inactive until dangerous voltage has been removed from the circuit.

PRINCIPLE OF HOW THEY WORK AND RESULTS

This family if Test instruments operate through a keypad interface. The number of keys and their function are different on each model. All interactions between the user and the instrument is done via the keypad. The testers have a liquid Crystal Display and two or three terminals. Each push button or key has a function.

DIGITAL DISPLAY

The digital Liquid Crystal Display is large. It measures (W)98mm x (H)24mm and has a 2Lines of 16 Characters. Language can be changed on demand. Dutch / French / German etc...(factory fitted at order)

FUSED

The tester is fused by a fast blow 500mA fuse.

CROWBAR PROTECTION

In case of misuse, a crowbar is integrated and will blow the fuse. This crowbar will reduce the damages in case of user mistake. The crowbar is activated at less than 6V (ac or dc).

AUTOMATIC BATTERY TEST

When the tester starts, it test it's batteries by drawing a heavy current from the batteries. During that heavy current, it measures the battery voltage and display it for a few seconds on the display. During normal use, the tester monitor the battery voltage, but without drawing a battery test current. It just measure the battery while in normal use.

VERY IMPORTANT AUTOMATIC FEATURES

Automatic Vac-dc Detect.

All of these testers in this family have the capability to detect Voltage AC and DC. This is done with the use of the internal safety voltmeter which does this work. However, this feature will only work if the test leads are securely connected to the circuit under test.

So, you must ensure that the lest leads are doing a perfect contact before beginning any test and before selecting any function. That contact must remain secure during the entirety of the tests on a particular circuit. We recommend you to use clip-on alligators and not the tips only, so that you can make sure the test leads are making a proper contact during the all duration of the tests.

Should the test leads not make contact at any time before,during and after the test, all the safety features of these testers will not functions. It's your responsibility to ensure proper contact of the leads at all times. Automatic Discharge of Capacitive and inductive Circuits These testers will discharge automatically all circuits charged by the tester, after a test is done, again, this will only be activated if the test leads make contact at any time before, during and after the test.

It's your responsibility to ensure proper contact of the leads at all times. Once a test is finished, the testers will automatically discharge capacitive or inductive circuit of their charge. The discharge can be observed on the display, in the form of a bar-graph. Again, do not disconnect the leads while discharge. Wait until completion of the discharge before removing any lead. During Discharge, the Buzzer will beep and the bar-graph will show some voltage. With some high charges, this may takes some time. Be patient and let the instrument discharge completely before proceeding to removing the leads.

The voltmeter is like an automatic Hold.

This feature has been developed by Top tronic Limited so that the user can \focus on his personal safety first.

The value will be held on the LCD for later reading after the leads are removed from Dangerous voltage and situations.

1000V, 500V, 250V, 125V, 100V, 50V Insulation Resistance Tests

When an Insulation Resistance Test is selected, the first thing the tester requires, is for you to connect the leads to the circuit under test. If the circuit is not voltage free, the tester will go back to the safety voltmeter until you insulate the circuit under test from any voltage source.

If the circuit under test is voltage free, then you will be asked to confirm that you want to test it now, then the test will start. You can observe the voltage output on the bar-graph and see the Insulation resistance results. Test can be stopped at any time or automatically, according to the type of test started and the duration you depressed TEST (see Ener Save ™ Mode)

TEST Key

The Test Key is utilized to start and stop the test.

This is in conjunction with EnerSave™.

EnerSave ™ feature

When you depress the TEST key to turn the selected test ON.The tester will automatically stop the test for you after about test running much longer, then depress and keep depressing the TEST key for more than 3 Seconds, the tester will beep when EnerSave™ is disabled.

For longer tests duration, every time you start a test, you need to keep depressing the TEST key for more than 3 Seconds to disable EnserSave™. EnerSave™ is the default setting of these testers. EnerSave™ was developed by Toptronic Ltd to help reduce Consumption by reducing the test duration automatically.

Ohm Key for Continuity Tests

Select the ohm key to make Continuity tests. Continuity test has a short circuit current of more than 200mA. That range can measure down to 0.01Ohms.

Use this feature with Auto-Null for Convenience.

Auto-Null Key for Continuity Tests (same key as ohm key)

You must depress the ohm key to auto-null the resistance of the test leads and the resistance of the fuse. Once this is done, that auto-null value is saved internally and only need to be done if you change the test leads of the fuse. This feature is very useful when checking Wiring Continuity with long wires. For example when measuring the continuity of the earth protective wires in a house.

Don't forget to short the test leads together while auto-nulling them.

OFF Key (Auto OFF always present)

The OFF key is a software key which is activated When the 1kV key is depressed for more than 5 seconds (provided no test is in progress and everything is discharged.

The 1kV key, when depressed for more than 5 Sec, will switch the tester OFF, or stop the test in progress.

In this case, you have to depress 1kV again to turn the tester OFF. The Tester turns OFF by itself after the programed time

MOV Selection Keys


The MOV test can be accessed by depressing the 1000V/500V and 250V/ 125V keys simultaneously.

This select the MOV test.

Make sure that you are testing the correct component before starting this test. This test starts with a voltage of 0Vdc, then increase that voltage until the MOV start conducting with 1mA of current.


The Voltage on the MOV, while 1mA is flowing through is displayed on the LCD as well as the equivalent Max AC voltage which could be utilized on this device.

INSIDE LID INSTRUCTIONS **1154TMF**

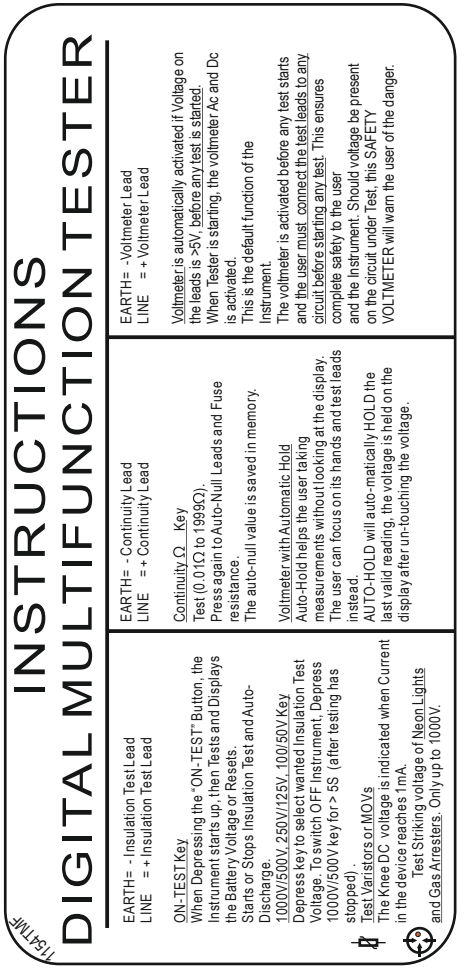

Today's new Equipments and Electrical Installations are generally Protected by MOVs.
It is now easy to test these devices to ensure their proper working and replace them if found damaged. The knee Voltage is shown on the display.

Pressing the 100V/50V and W keys simultaneously will select the Gas Arrester test Function.

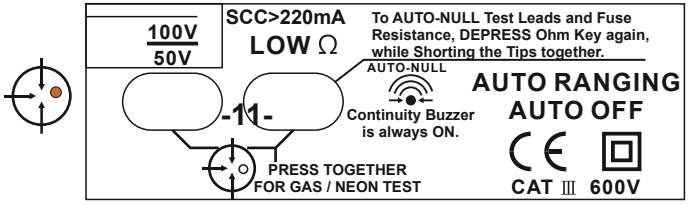

The Trigger Threshold Voltage is shown on the LCD. All Gas protection devises can be Tested, including Neon Lights.

GAS Arrester Selection keys

The GAS test can be accessed by depressing the 100V/50V and Ohm keys simultaneously. This select the Gas Arrester test.

Very similarly to the MOV test, but using an other algorithm, much faster. It display the firing voltage of hte gas arrester.

AUTOMATIC DISCHARGE ON INSULATION TESTS

All insulation tests have an automatic discharge which can be monitored on the LCD bar-graph while discharging.

The discharge will continue until the voltage is safe. ONLY then, you can disconnect the test leads.

NON DESTRUCTIVE TESTS

All the tests are using a current of maximum 1mA and are non destructive.

The only test which use more than that is the continuity test. It's voltage is 5V maximum.

The user should make sure that when doing a test, he knows what he is testing and how he is testing it. Making a sketch of every test will lower the risk of bad testing. If you are not sure of the test you are going to proceed with, ask someone which is qualified to give you the correct answers.

PRE-TESTING SAFETY

Always check the fuse before using the instrument. This is done by shorting the test leads and selecting the Continuity test. Use this, to null the test leads resistance at the same time.

- Always clip securely the leads onto the circuit under test. DO NOT JUST TOUCH IT as this could make intermittent contact and therefore the safety features may not work all the times because the connections may not be present at all times.

- Always connect the test leads and make sure they make proper contacts to the circuit under test before pressing the test buttons. These testers are smart, but can


only be as smart as your connections. That mean that all the safety features will only work if you have proper connections prior, during and post testing, to the circuit under Test.


All safety features can only work if the fuse is intact and correct. Follow the interactive messages on the display.

These testers rely completely on you, the user, to connect the leads securely onto the circuit under test before starting any tests and before selecting any test.

That mean that from the time you switch the tester ON, you should connect securely the test leads from the tester's terminals to the circuit under test. When ever possible, use fused test leads for increased safety. Fused test leads are in series with the existing internal fuse, so the voltage will be divided on both fuses, therefore, reducing the voltage on both fuses and therefore in the worst case, making them safer when opening (breaking the circuit).

Insulation test Voltage selection is done by Depressing the corresponding key. Depress twice the 1000V/500V for example to select 500V, similarly for 250V/125V or 100V/50V, etc ...

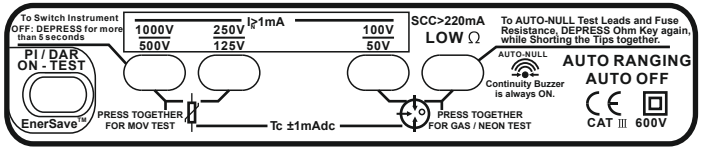

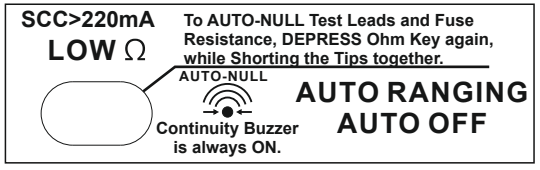


Select the Continuity test which has a Short Circuit Current of 200mA. It Complies to all latest standards.



Auto-Null the resistance of the test leads and of the fuse so that continuity measurements can show only the resistance under test. Buzzer is always On. Low resistance value BEEP when low. It's helping when tracing circuitry.

Pressing the 1000V/500V and 250V/125V keys simultaneously will select the MOV Test.

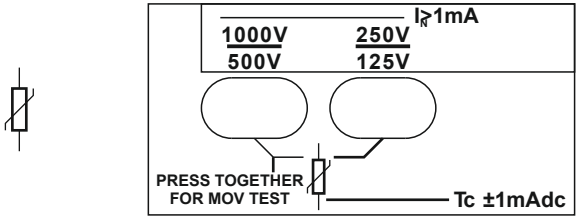


OPERATING INSTRUCTIONS

Leads Connections

The Test Leads are color coded for easy use. These testers only use 2 leads which are located on both back extremities of the front panel. The user can vusualy check these connections at any time.

FUNCTIONS

AUTO-OFF If after a test, no key is depressed for ± 5 minutes, minutes, theinstrument will switch off automatically.

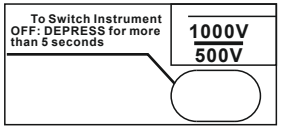

You can turn OFF the Tester without having to wait for Auto-off. To Turn-Off and switch OFF the Tester immediately, Depress the 1000/500V key for 5 seconds. If a test is still in Progress, pressing 1000/500V key will stop the test. In this case you need to press 1000/500V for 5 secretary again.

Batteries are Tested during start-up of the Tester. During this Battery Test, a larger than average current is drawn. The worst cast Battery Voltage is seen on LCD.

The Batteries are tested automatically at start up the current Drawn from the batteries is about 300mA. While current is drawn, the total battery voltage is Measured and displayed. Note that battery voltage is always monitored during use of the instrument. Should the battery become too low, the low Battery symbol will be displayed.

Voltmeter ac-dc is automatically selected after starting the tester and if voltage is present on the test leads before any test. Follow instructions on the display.

Ac and Dc voltages are automatically detected and shown. This is the default function of the Instrument. The voltmeter is selected by default by the Instrument. The voltmeter is activated before any test start and the user must connect the test leads to any circuit before starting any test.

Voltmeter ac-dc is automatically selected after starting the tester and if voltage is present on the test leads before any test. Follow instructions on the display.

This ensure complete safety to the user and the Instrument. Should voltage be present on the circuit under Test, this SAFETY VOLTMETER will warn the user of the danger.

VOLTMETER AUTO-HOLD

As ADDED SAFETY, this Auto-Hold helps the user taking measurement without watching the display. The user can Focus instead, on it's hands and test leads. AUTO-HOLD is always enabled, the tester will automatically HOLD the last valid reading, which mean that when the user touch a voltage, that voltage is held on the display even after un-touching the voltage.

This add great safety for the user as he can focus on it safety by only looking at the test leads.